


Lockking® Security Lock Bar Instructions

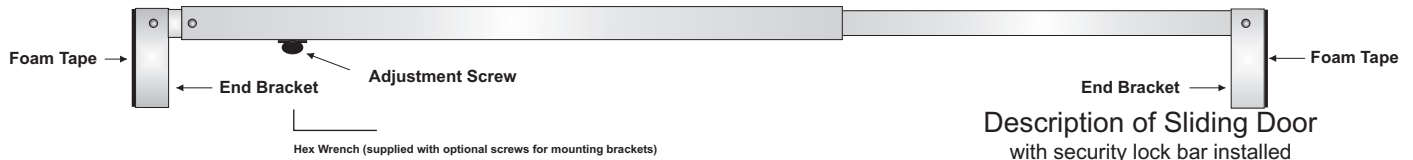

Description of Sliding Door with security lock bar installed

VERY IMPORTANT PLEASE READ! The flat surface areas on the jamb side and the sliding glass door edge where the brackets are to be mounted must be cleaned with isopropyl (rubbing) alcohol to remove any dirt or oil for the proper adhesion of the 3M VHB Foam Tape.


DO NOT USE WINDOW CLEANER OR SOAP.

STEP 1- Measurement


- Measure from bottom of track to desired height on the sliding glass door edge and jamb side and make a pencil mark.
- Suggested height is 40"- 42" or handle height.

STEP 2- Installation


- Peel off backing on foam tape, apply bracket to jamb side, centered and below pencil mark.
- Repeat process for sliding glass door.
- Now that the Lock Bar is installed a simple adjustment is required.

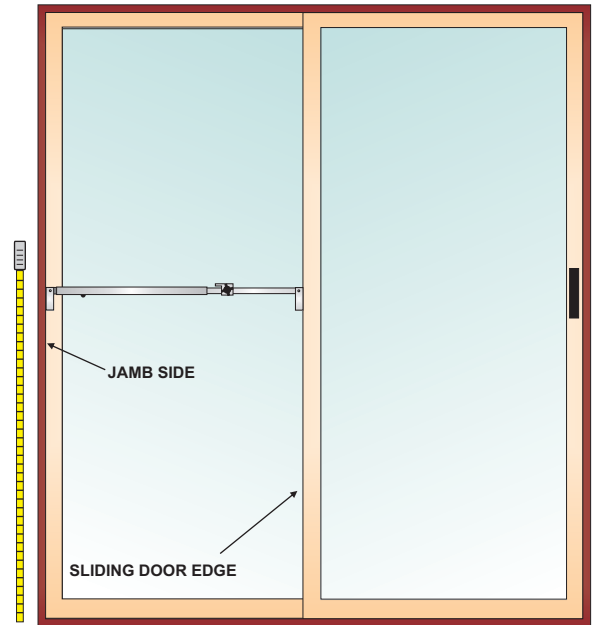

STEP 3- Adjustment

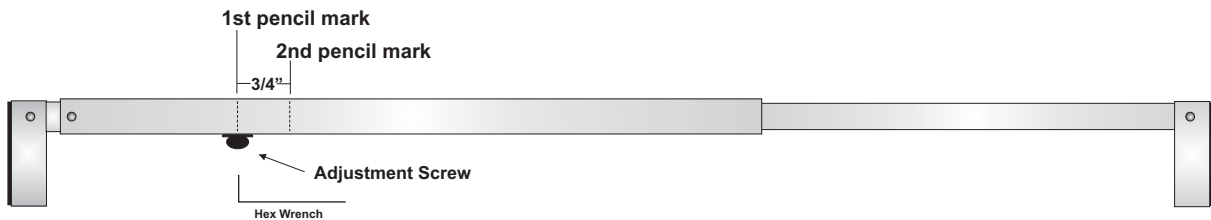

- Loosen adjustment screw with hex wrench and slide screw towards middle of Lock Bar till it stops
- Make a lite pencil mark locating center of screw.
- Make a 2nd lite pencil mark 3/4" over towards middle of Lock Bar.
- Lift Lock Bar up in the middle to release any tension and move adjustment screw to 2nd mark and tighten securely.

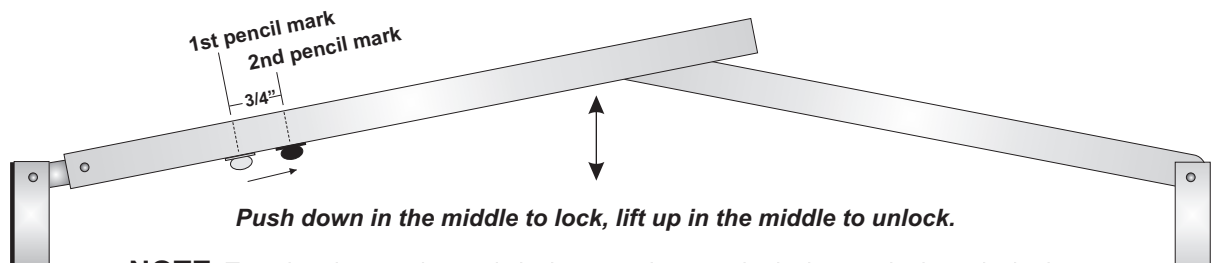

NOTE: Test door by opening and closing to make sure the lock stays in the unlocked position until you manually lock it. If there is any play in the door when it is locked adjust the screw in 1/8" increments until there is no play.

A few drops of household oil on the inside track will keep the action smooth.